

Wiring Diagram

Wessex ModuMax 100 Series

The following electrical connections are provided on each module

- Supply Live, Neutral and earth.
- Supply Input for Boiler Fault and Normal Run Signs
- Boiler General Fault Alarm Signal Output
- Boiler Normal Run Signal Output
- 0-10v Analogue Control Signal Input
- Remote on/off Control Input
- Boiler Shunt Pump Output
- Safety Interlock Circuit Input

