Wiring Diagram

Purewell Integra
Fully Automatic

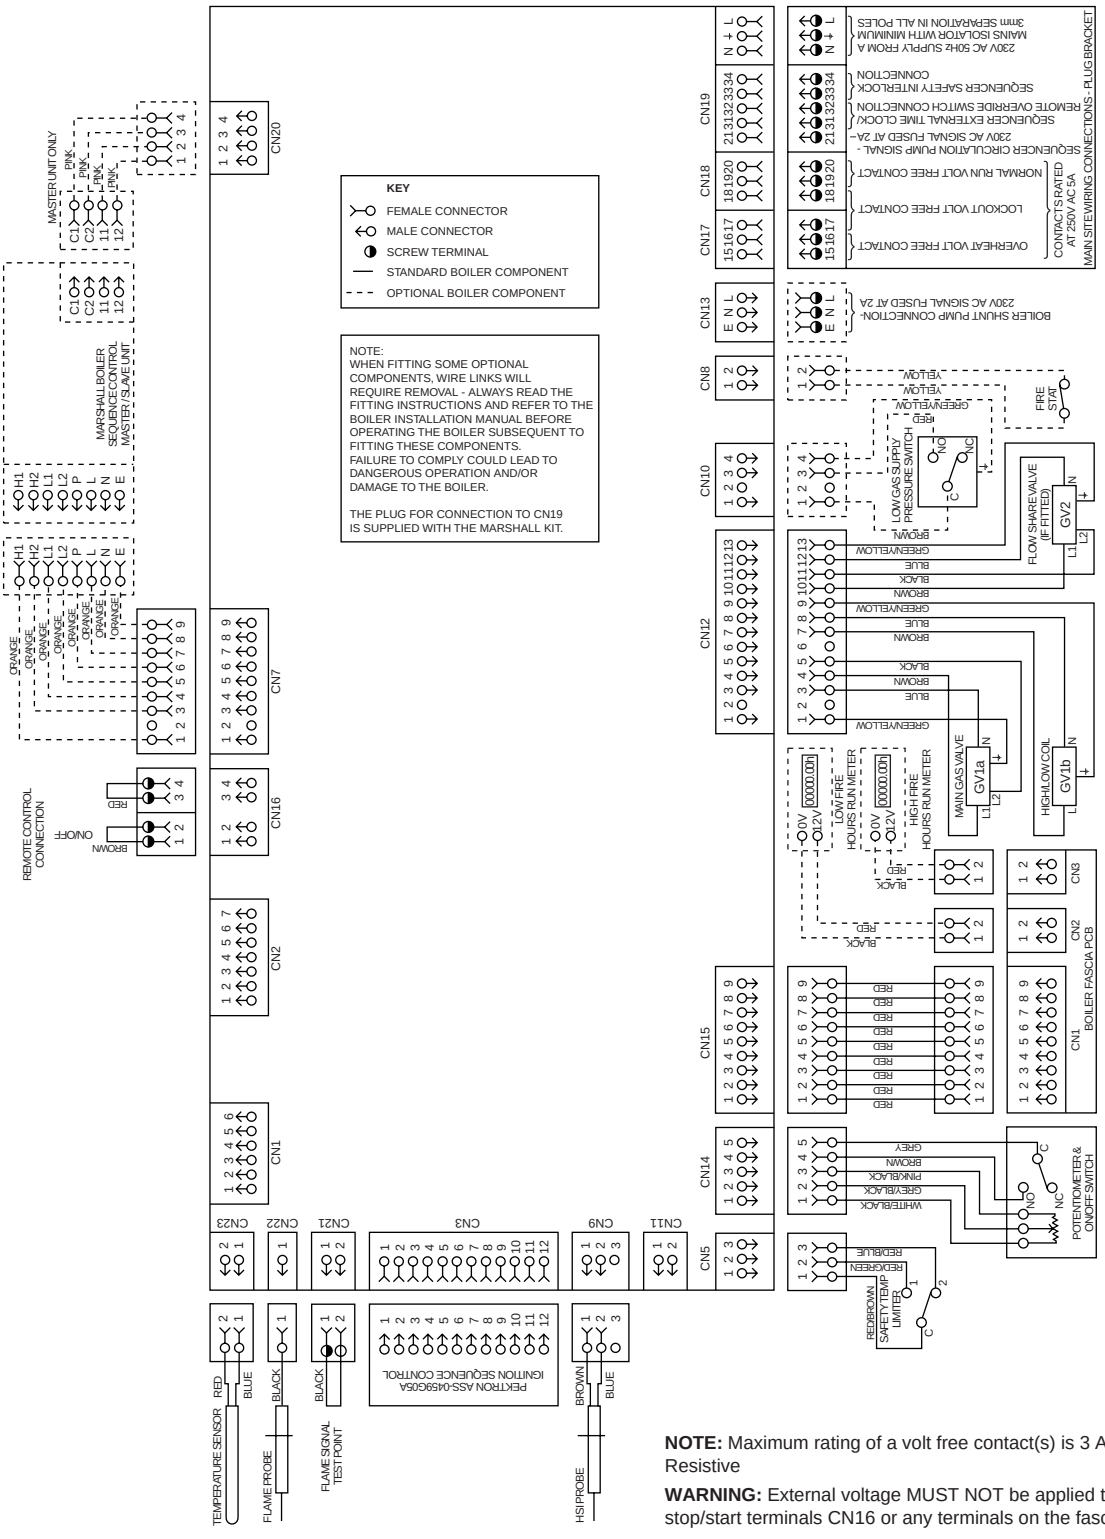

NOTE: Maximum rating of a volt free contact(s) is 3 Amperes Resistive

WARNING: External voltage MUST NOT be applied to remote stop/start terminals CN16 or any terminals on the fascia.